



EA301 Door Alarm - Batch 5284

Undo 1 screw and remove the cover securing the battery compartment on the main unit.
Insert 4 "AAA" batteries (not included), following the correct polarity indicated inside the unit.
Replace the battery cover and screw.

Fitting the alarm

Place the alarm in the desired location, preferably on the door or window with screws or adhesive tape (not included).

The magnetic contact must be aligned next to the alarm with the arrows inline so that contact can be made when the door is closed. The contact can be mounted on either side, left or right. When the door or window is closed the contact needs to be less than 8mm apart.

To set

The unit is factory set to code "1 2 3 4".

Enter the 4 digit code "1 2 3 4". The red light will illuminate for 5 seconds.

After the light goes out, you can exit by opening and then closing the door.

(Opening / closing the door or window after the light goes out activates the unit after a 10 second delay)

When the door / window is re-opened the alarm will bleep for 10 seconds and then go into full alarm unless deactivated.

To deactivate

The alarm can be deactivated at any time by entering the 4 digit code "1 2 3 4". The red light will flash for 5 seconds to indicate it has been deactivated.

If the alarm is not deactivated it will reset after 30-40 seconds.

Changing the 4 digit code

Familiarise yourself how the unit works before changing the code to your secret number.

With the batteries installed, press number 4 for more than 3 seconds. You will hear a long bleep which indicates the code can be changed. Start by entering the original code the unit is set to. *(If it is still set to the factory code this will be "1 2 3 4")*. You will hear a long bleep and then the new code can be entered. Once 4 numbers have been entered a long bleep will sound again, indicating the new number is set. *All 4 numbers can be used in any sequence and more than once.*

Record your new number here. " _ _ _ _ "

When using this product follow these battery precautions.

- Use only the appropriate size batteries
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Incorrect polarity may cause damage to the alarm.
- Do not mix different types of battery such as Alkaline and Carbon-zinc or old batteries with new.
- If the alarm is not used for long periods of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not recharge batteries not intended to be recharged as they can overheat and rupture. (Always follow the manufacturer's directions.)